


## **Stylus Assembly**

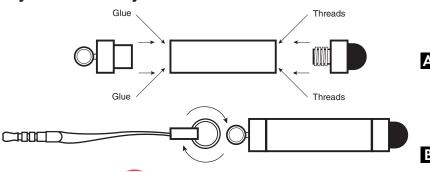

- A. Put two small drops of glue inside body as shown. Press in lanyard holder.
  Put aside for approx 1-hour to allow glue to dry. After allowing for 1-hour for glue to dry screw stylus tip into body as shown.
- **B.** Attached lanyard to lanyard holder as shown.



18745 Sheldon Rd., Middleburg Hts., Ohio 44130 (216) 898-8956; Fax (216) 898-8962; 1-877-736-5487 www.sebhomeprojects.com