


www.penkits.com

bereahard@aol.com

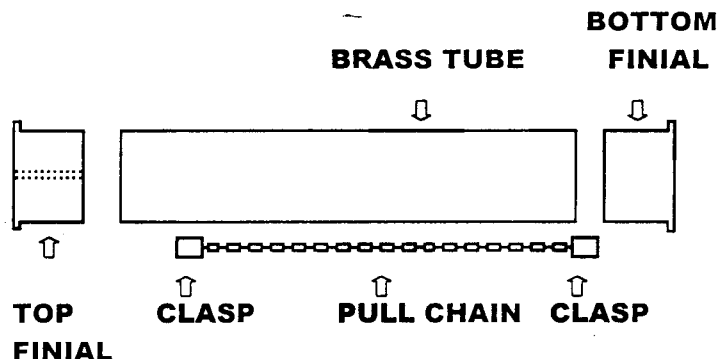

CHAIN PULL KIT

TOOLING NEEDED:

MANDREL-A

DRILL 7 MM(J BIT)

BUSHING 1-A

WOOD 1/2 X 1/2 OR LARGER

DRILLING & TURNING

1. CUT WOOD SAME LENGTH AS TUBE OR LITTLE LONGER TO SQUARE OFF.
2. DRILL WITH J BIT.
3. GLUE TUBE INTO WOOD USING EPOXY.
4. TURN TO DESIRED SIZE OR SHAPE. BUSHINGS ARE USED TO HOLD THE WOOD IN PLACE ON THE MANDREL AND MATCH THE FINIAL OD. NOT TO DETERMINE FINIAL SHAPE. BE CREATIVE!
5. SAND & FINISH.

ASSEMBLY

1. PRESS BOTTOM FINIAL WITHOUT HOLE INTO ONE END OF BLANK.
2. SNAP OFF CLASP FROM ONE END OF PULL CHAIN.
3. THREAD PULL CHAIN THROUGH TOP FINIAL WITH HOLE AND PUT CLASP BACK ON PULL CHAIN.
4. PRESS THIS TOP FINIAL INTO OTHER END OF WOOD BLANK.