


PERFUME HOLDER NECKLACE W/30 " CORD  
AND TOOTHPICK HOLDER KEY RING

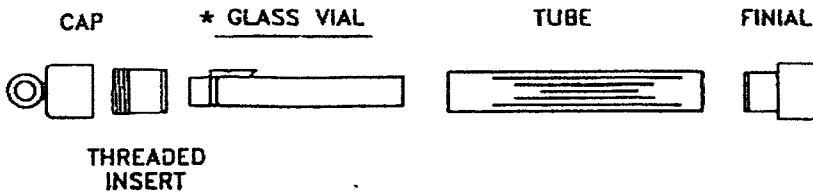

Tooling

Wood 5/8 x 5/8

Drill 11 MM

Depth Collar-Use Depth collar from the cap of Parker Click Pen or with  
seperate collar made for these kits.

Mandrel- B

---

Turning

1. Cut wood length of tube or little longer so you can square off.
2. Drill with 11 MM drill.
3. Glue in tube & turn.
4. Finish.

---

Assembly

1. Press in Finial.
2. Press in threaded insert.
3. Drop in Glass Vial.
4. Screw on Cap.
5. Cut lanyard to 30" or desired length.
6. Thread Lanyard into Lanyard hole before attaching to Clasp end.

---

TOOTHPICK HOLDER KEY RING

1. TURNING: SAME AS ABOVE:
2. ASSEMBLY: FOLLOW STEPS 1-2-4 ABOVE
3. SLIDE RING ON.
- \* GLASS VIAL ONLY FOR PERFUME HOLDER